

Mosquito Repellent Outdoor Lantern

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

Allow 10 to 30 minutes, depending upon the size of the area, for product to take effect. This product works well in outdoor areas where there is minimal air movement, such as decks, unenclosed porches, patios and yards. Product may be used for camping. Use one lantern per each 225 square feet (an area 15' x 15') or 15' in diameter. Lantern provides light and repels mosquitoes, black flies, flying insects and bugs. Batteries power the light; heat from the ThermaCELL® cartridge activates the repellent mat and provides mosquito repellency for an area the size of an average deck. Use Restrictions: Only for outdoor use as an insect repellent. Do not use indoors, in tents or in any enclosed area. Do not insert anything other than ThermaCELL® mats into the lantern. Cover or remove all exposed food. Do not leave lantern unattended or use in windy conditions. Do not expose lanterns or mats to rain. Place lantern on a flat, stable surface with the grill facing upward. Clean with a damp cloth only when the lantern is cool and inactive. Butane cartridges other than ThermaCELL® cartridges will not work in this lantern.





2. Remove one ThermaCELL® mat from wrapper. Mats last a maximum of 4 hours. Mat turns from pale blue to white when repellent has been exhausted.



3. Make sure the 'ON/OFF' button is in the 'OFF' position. Insert the mat under the grill at the top of the lantern.



4. Remove top of lantern and globe from base by squeezing the latch tabs and lifting out the top of lantern until it is fully removed from the base.





5. Remove the butane cartridge cap. Screw the cartridge into the center of the lantern globe. Make sure the cartridge is fully inserted by turning it clockwise until it stops. Replace lantern globe on base. One ThermaCELL® butane cartridge lasts a maximum of 12 hours.





6. To turn on lantern light, push the black switch located on the base of the lantern. Push the switch to 'LO' for low light, 'HI' for high light and 'OFF' to turn off the light. If lantern light does not turn on, replace batteries.



7. The lantern may be used as a mosquito repellent with or without the light being on. However, for the lantern to repel mosquitoes and flying insects, the mosquito repellent must be activated. To activate the mosquito repellent, slide the 'ON/OFF' button to the 'ON' position. The gas will begin to flow.



8. Wait approximately 5 to 10 seconds and then depress the 'START' button three to five times in rapid succession.



9. To verify that the mosquito repellent is activated, look at the circular view hole located at the top of the lantern. An orange light will glow. If there is no orange light, check to make sure the lantern is 'ON' and the cartridge is completely screwed into place. Also check the fuel level in the cartridge. If the fuel level in the cartridge is empty or near empty, remove cartridge and replace with a



new ThermaCELL® cartridge. Then once again turn the lantern 'ON' and depress the 'START' button three to five times in rapid succession. Check again to make sure the orange light is glowing.

10. Do not touch the grill; it will be hot after a few minutes. Some visible vapor will appear during use. This is normal. When finished using the lantern, slide the 'ON/OFF' button to the 'OFF' position. If using the light, push the light switch to "OFF" to extinguish the lantern light. Allow lantern to cool completely. Lantern is now ready for storage.





STORAGE AND DISPOSAL:

Do not contaminate water, food or feed by storage or disposal. Storage: Store unused mats in original box in a cool, dry place inaccessible to children and pets. Store lantern and butane cartridges in original box in a cool, dry place away from sources of boat.

Disposal: Non-refillable container; do not refill or reuse this container. If cartridge is empty or for used mats: Do not reuse empty packaging, wrappers or cartridges. Do not puncture or incinerate empty cartridges. Place in trash or offer for recycling if available. If cartridge is partly filled or for unused mats: Call your local solid waste agency for disposal instructions. Never place unused mats down any indoor or outdoor drain. For unwanted lantern: Place in trash or offer for recycling if available. Batch Code: